



Interfaces	TX: 3.5mm Audio Input Port Charging/Upgrading Contacts RX: 3.5 mm TRS Output Interface 3.5mm Headset Interface Charging/Upgrading Contacts Charging Case: USB Type-C Interface
Frequency Bandwidth	2.4GHz AFH
Built-In Mic	Polar Pattern: Omnidirectional Frequency Response: 20Hz~20KHz
Lavalier Mic	Polar Pattern: Omnidirectional Frequency Response: 20Hz~20KHz
Reference Audio Input Level	-65 dBV
Maximum Input Sound Pressure Level	100dB SPL (1KHz@1m)
Dynamic Range	100 dBA
Polar Pattern	Omnidirectional
Audio Output Level Change Range	21-State: 45dB
Transmission Latency	<5ms
Battery Mode	TX: 200mAh (0.76Wh) RX: 530mAh (1.96Wh) Charging Case: 3500mAh (12.7Wh)
Battery Life	TX: About 4h RX: About 7.5h Charging Case: About 2.5 times (Charge 2 TX and 1 RX at the Same Time in Full Charged States)
Charging Time	TX: About 45 minutes RX: About 65 minutes Charging Case: About 2.5h
Firmware Upgrade Method	PC
Dimensions	TX: (L*W*H) 37*37*17.5mm RX: (L*W*H) 67*41*20.5mm Charging Case: (L*W*H) 121*61*43.5mm
Weight	TX: 20.5g RX: 51g Charging Case: 227.5g

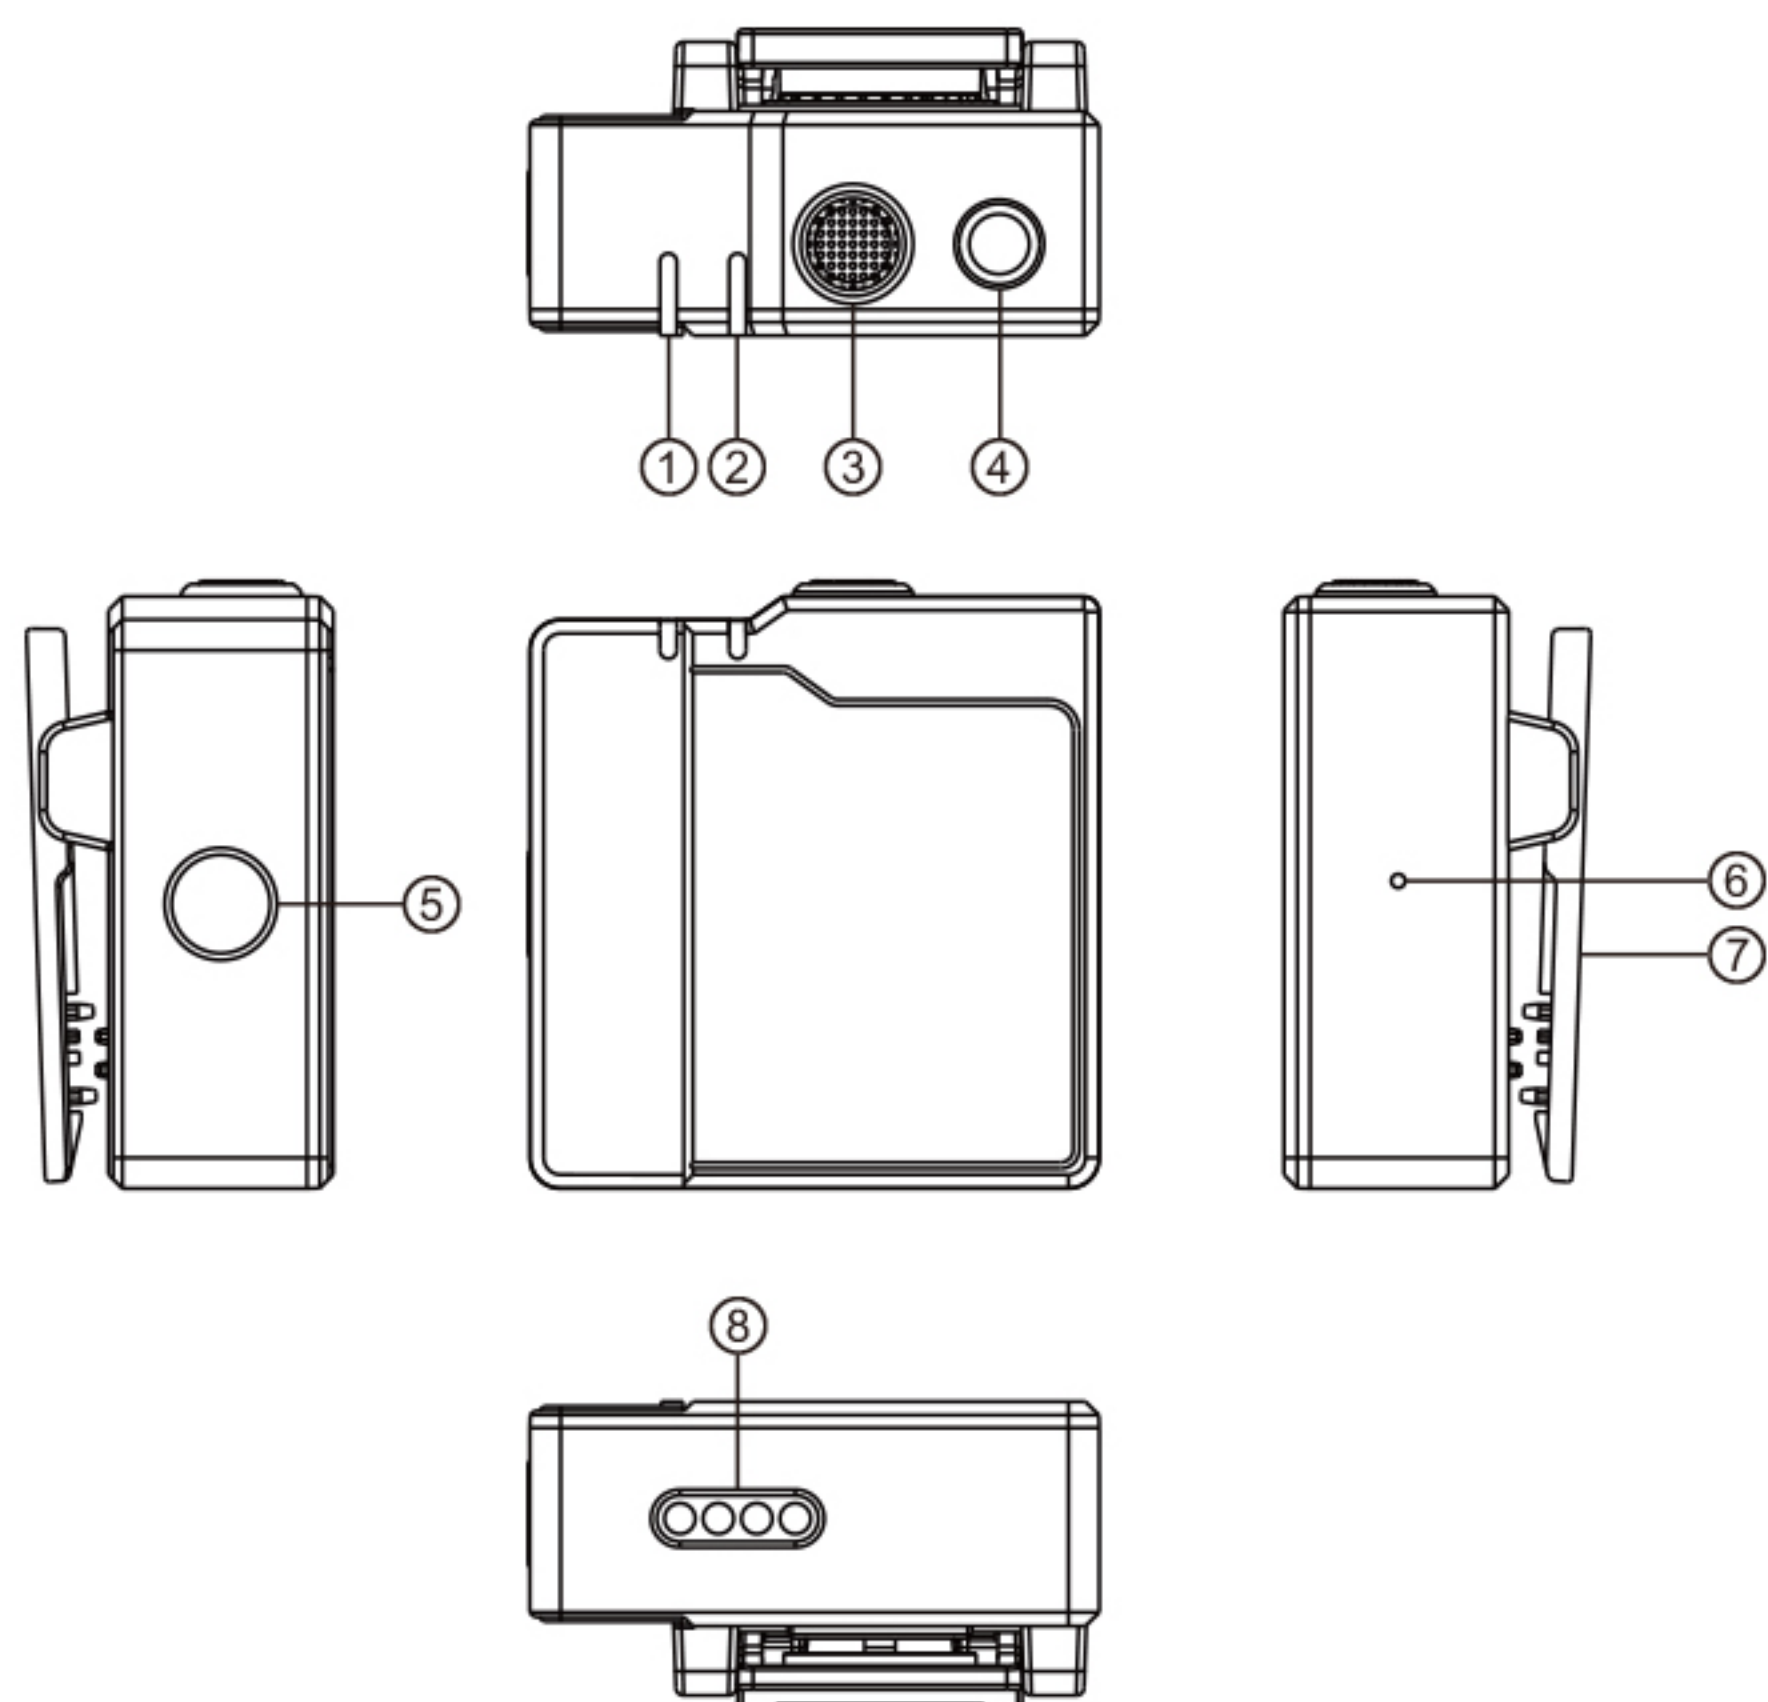


A TRANSMITTER

- ① Power Indicator (Red: Low Battery, Green: Safe Battery Status, Orange: Charging)
- ② Link Indicator (Blue/Cyan Flashing: Disconnected, Blue/Cyan: Connected, Orange: MIC Mute)
- ③ Built-in Microphone
- ④ 3.5mm Audio Input Port
- ⑤ Power Button (Press for 3s to Switch On/Off, Click to Mute)
- ⑥ Reset Button
- ⑦ Installed Belt Clip
- ⑧ Charging Upgrade Contact

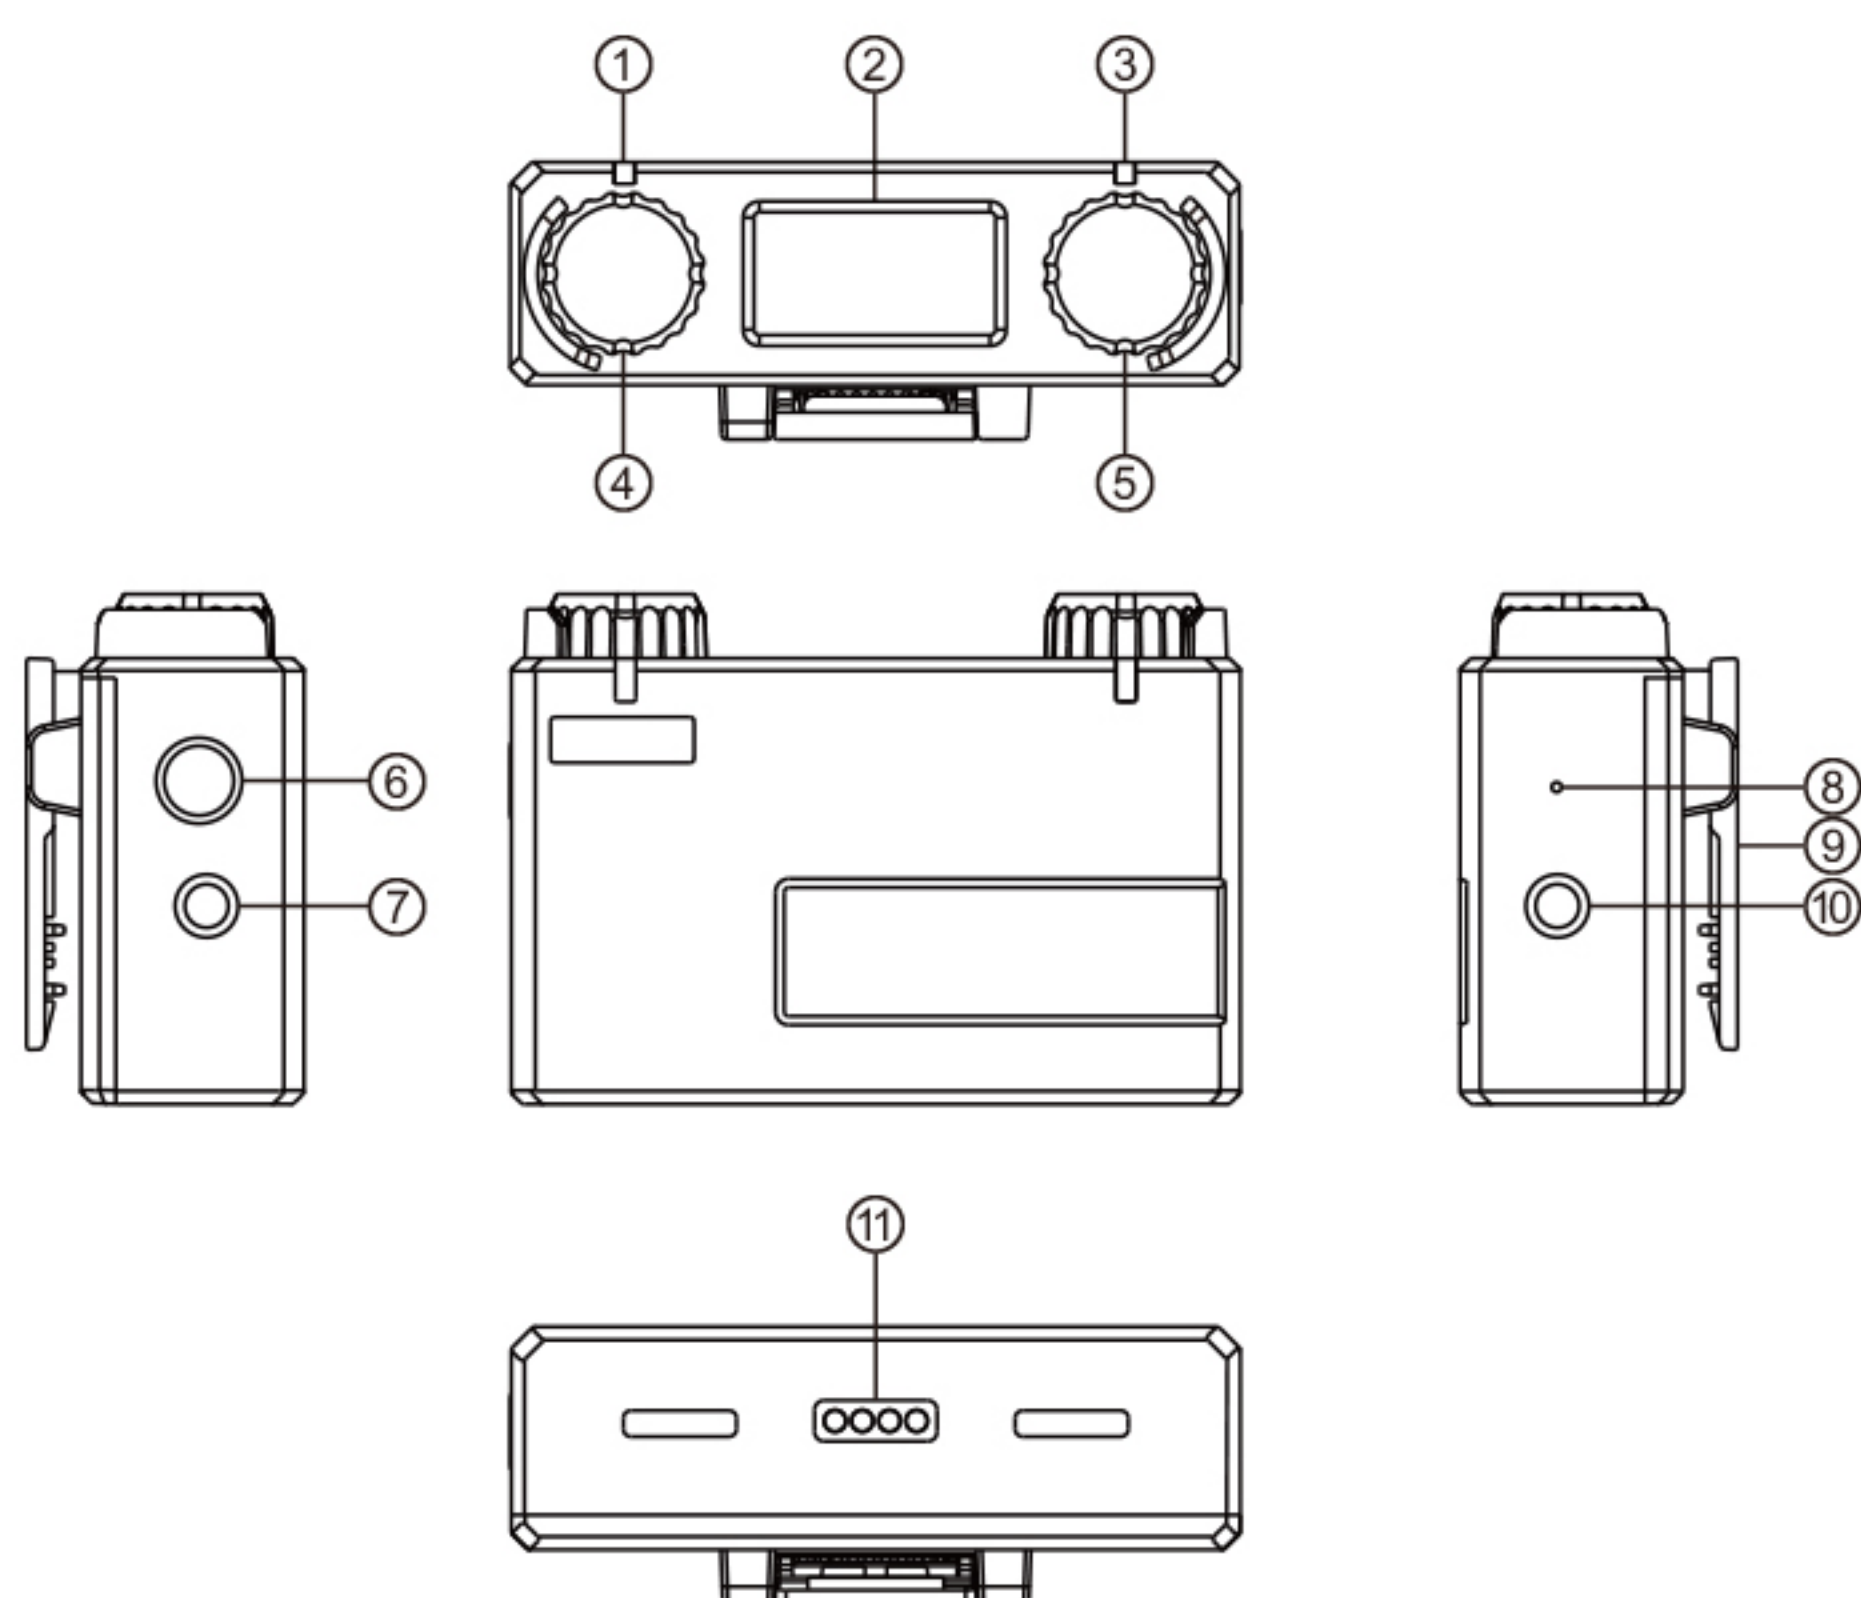


B RECEIVER

- ① Link Indicator (Left Channel)
- ② Display Screen
- ③ Link Indicator (Right Channel)
- ④ Volume Knob (Left Channel): Adjust the Volume of the Left TX
/Recording Mode Switch Button: Press to Switch the Recording Mode
/Left TX Mute Button: Click to Mute the Left TX
- ⑤ Volume Knob (Right Channel): Adjust the Volume of the Right TX
/Channel Switch Mode: Press to Switch the Channel when Stereo Mode
/Right TX Mute Button: Click to Mute the Right TX
- ⑥ Power Button (Press for 3s to Switch On/Off)
- ⑦ 3.5mm Headphone Monitoring Port
- ⑧ Reset Button
- ⑨ Belt Clip
- ⑩ 3.5mm Audio Output Port
- ⑪ Charging Upgrade Contact

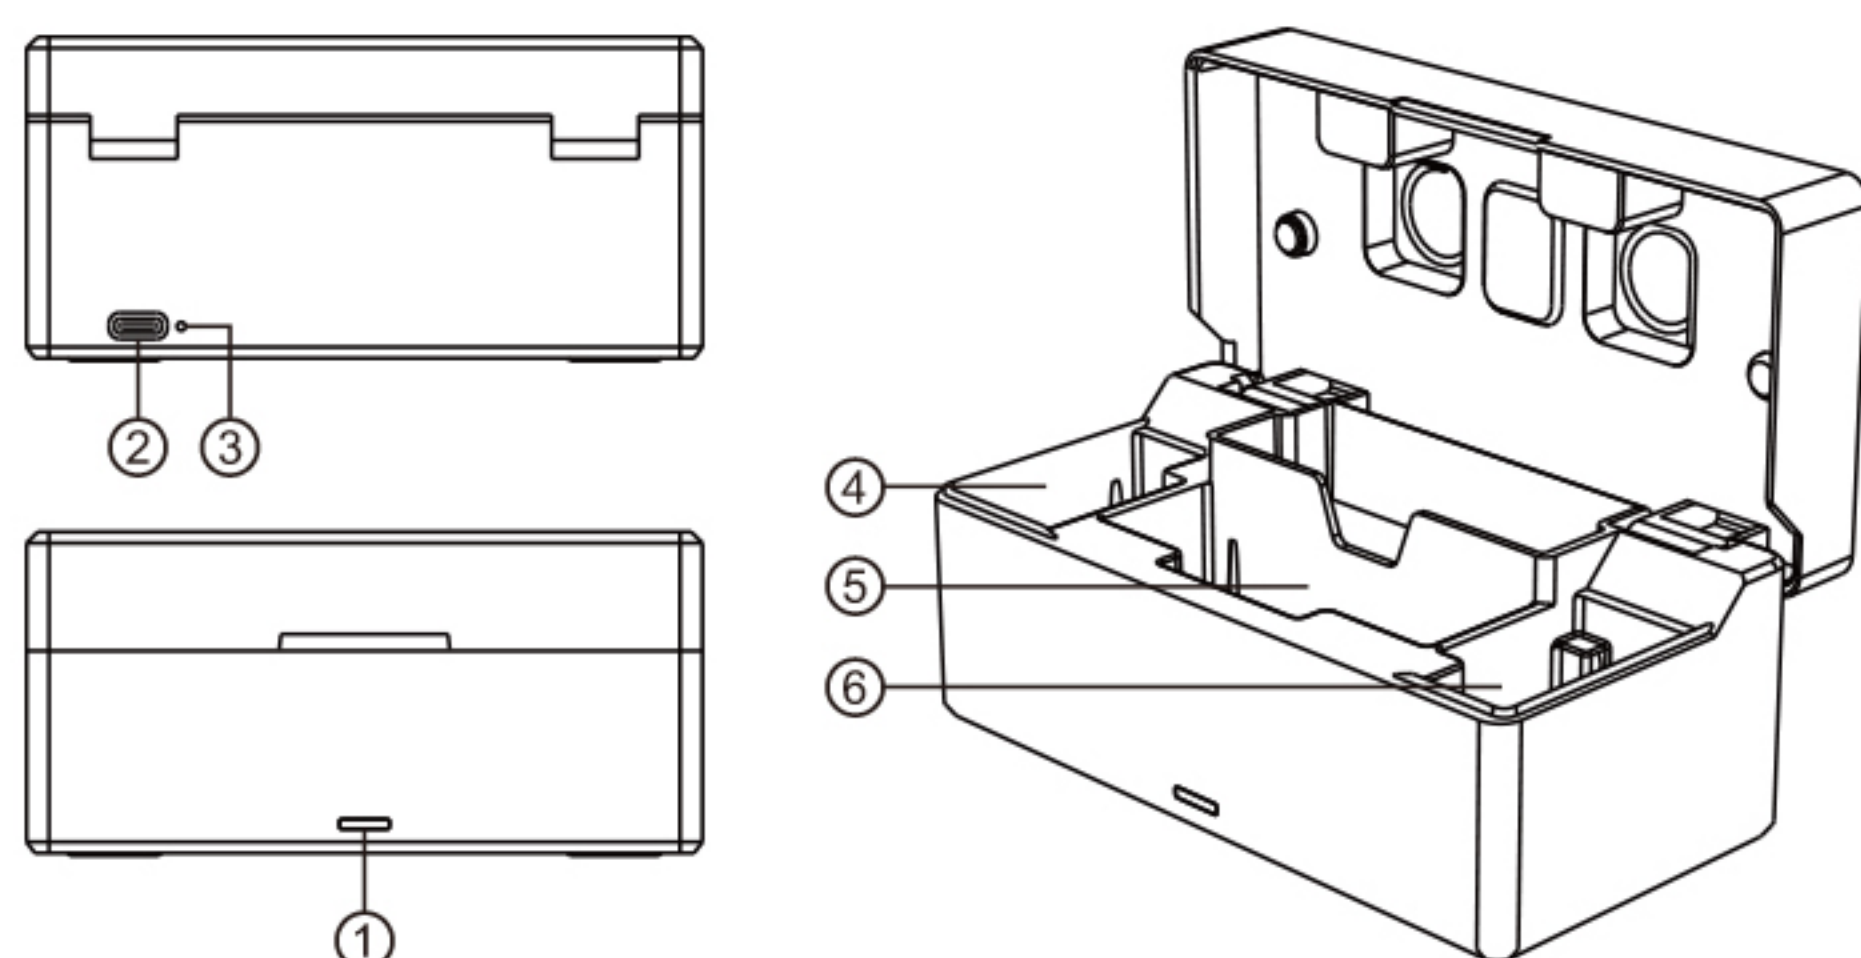


C CHARGING CASE


- ① Power Indicator (Red: Low Battery, Green: Safe Battery Status, Orange: Charging)
- ② USB Type-C Port for Charging
- ③ Reset Button
- ④ TX Charging Slot
- ⑤ RX Charging Slot
- ⑥ TX Charging Slot

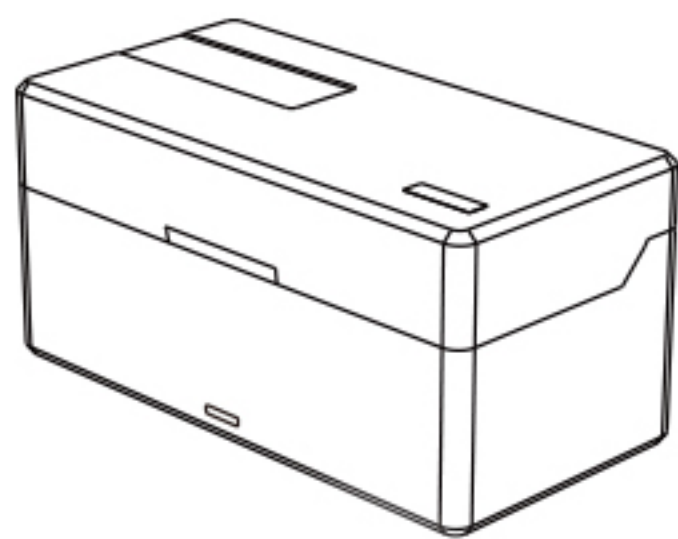

①

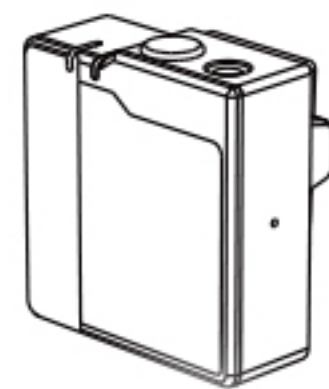


②

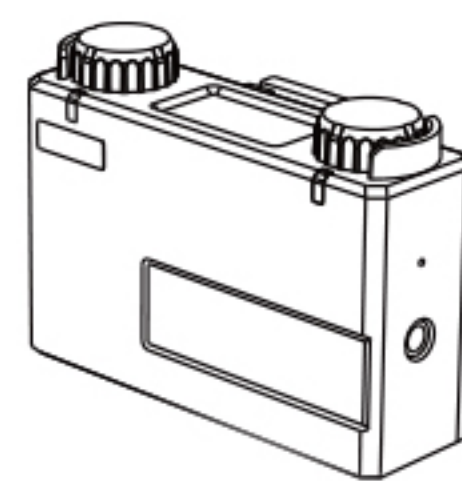


③



④

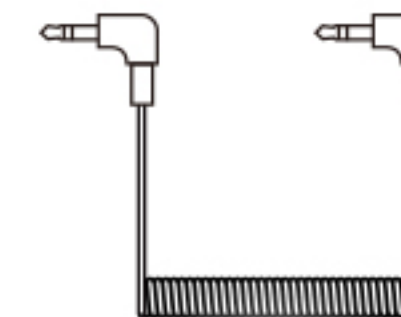

⑤

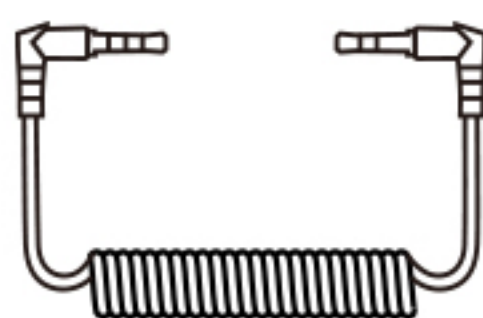

⑥




⑦



⑧



⑨

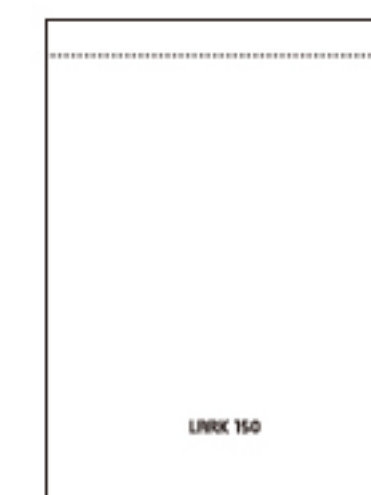

⑩

LARK 150 Duo

- ① Charging Case x1
- ② Transmitter x2
- ③ Receiver x1
- ④ Furry Windshield x2
- ⑤ 3.5mm TRS Patch Cable x1
- ⑥ 3.5mm TRS to TRRS Patch Cable x1
- ⑦ USB Type-A to Type-C Cable x1
- ⑧ Lavalier Microphone x2
- ⑨ User Guide x1
- ⑩ Storage Bag x1

LARK 150 Solo

- ① Charging Case x1
- ② Transmitter x1
- ③ Receiver x1
- ④ Furry Windshield x1
- ⑤ 3.5mm TRS Patch Cable x1
- ⑥ 3.5mm TRS to TRRS Patch Cable x1
- ⑦ USB Type-A to Type-C Cable x1
- ⑧ Lavalier Microphone x1
- ⑨ User Guide x1
- ⑩ Storage Bag x1

LARK 150 Single TX

- ② Transmitter x1
- ④ Furry Windshield x1
- ⑧ Lavalier Microphone x1
- ⑨ User Guide x1